

PARTS LIST

HT238P

CONTENTS


1. MAIN BODY	1 ~ 4
2. ENGINE	5 ~ 8
3. CARBURETOR, FUEL TANK	9 ~ 10
4. ACCESSORIES	11 ~ 12

2017. 11.




P/N 524562

1. HT238P
MAIN BODY

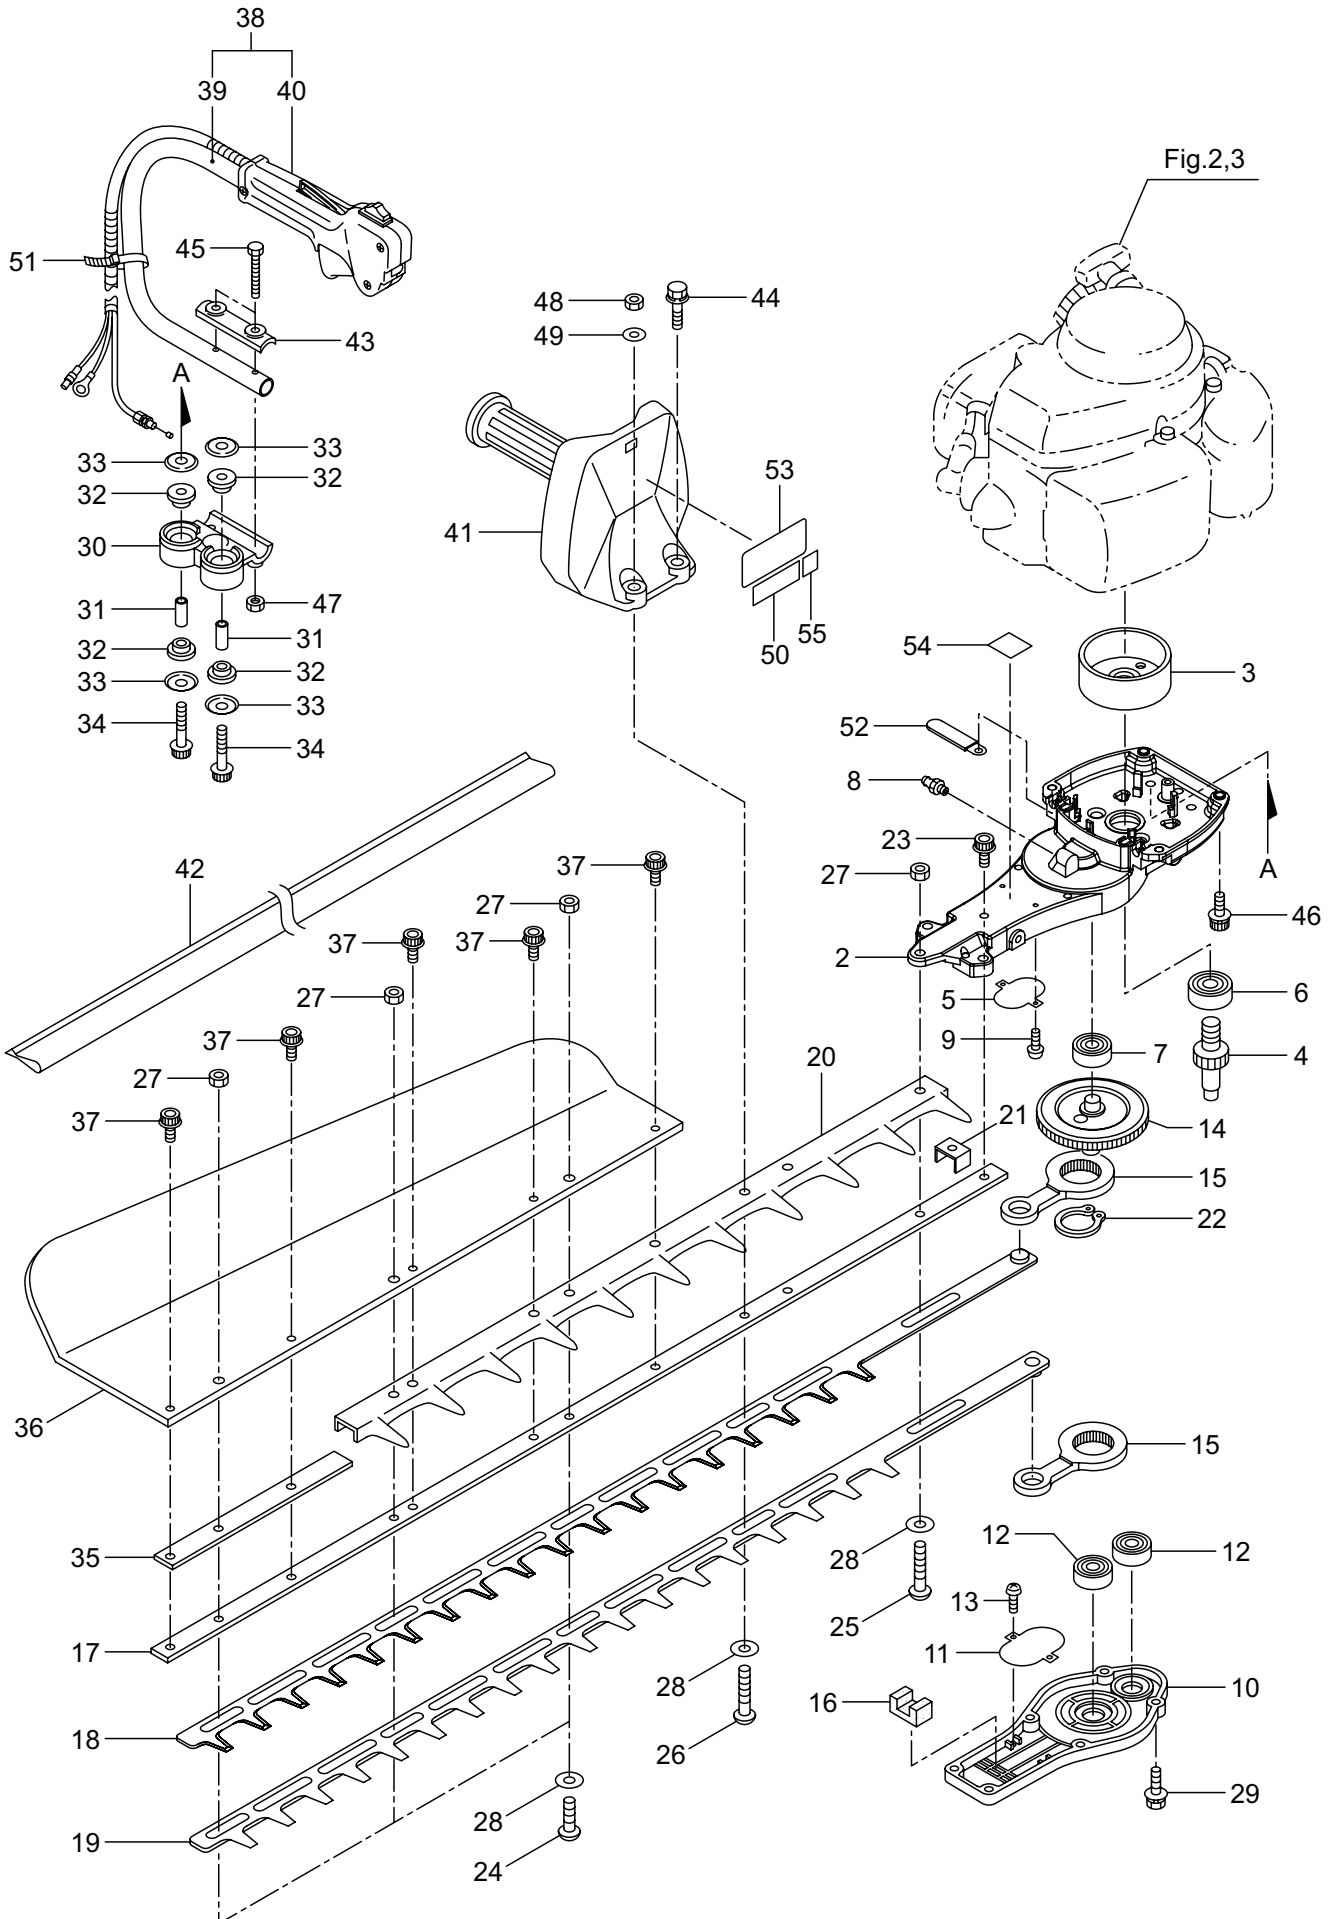


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	362440	HT238P	1	
1-2	279077	Upper Case	1	
1-3	270021	Drum	1	
1-4	271473	Pinion	1	
1-5	271474	Plate	1	
1-6	580767	Bearing	1	#6001 2RS
1-7	270423	Bearing	1	
1-8	991937	Grease Nipple	1	M6
1-9	991924	Screw	2	M3x5
1-10	271475	Lower Case	1	
1-11	271474	Plate	1	
1-12	270423	Bearing	2	
1-13	991924	Screw	2	M3x5
1-14	271465	Crank Comp	1	
1-15	271466	Rod	2	
1-16	270567	Felt	1	
1-17	279079	Guide Plate	1	
1-18	279080	Upper Blade	1	
1-19	279081	Lower Blade	1	
1-20	279082	Blade Guide	1	
1-21	270757	Plate	1	
1-22	580777	Snap Ring	1	#26
1-23	272282	Screw	1	
1-24	991914	Screw	3	
1-25	271229	Screw	1	
1-26	279083	Screw	1	
1-27	991941	U-Nut	4	M6
1-28	991913	Washer	5	
1-29	271910	Screw	6	
1-30	577136	Handle Bracket	1	
1-31	274288	Spacer	2	
1-32	274289	Cushion	4	
1-33	274290	Washer	4	
1-34	274291	Screw	2	
1-35	279084	Spacer	1	
1-36	274526	Plate	1	
1-37	279085	Screw	5	
1-38	274240	Left Handle Ass'y	1	Incl.39,40
1-39	274241	Left Handle	1	
1-40	274242	Throttle Trigger	1	
1-41	270090	Right Handle Ass'y	1	
1-42	270070	Cover of Blade	1	
1-43	577133	Handle Fitting	1	
1-44	270151	Bolt	1	M6x20
1-45	580796	Bolt	2	M5x30

1. HT238P
MAIN BODY

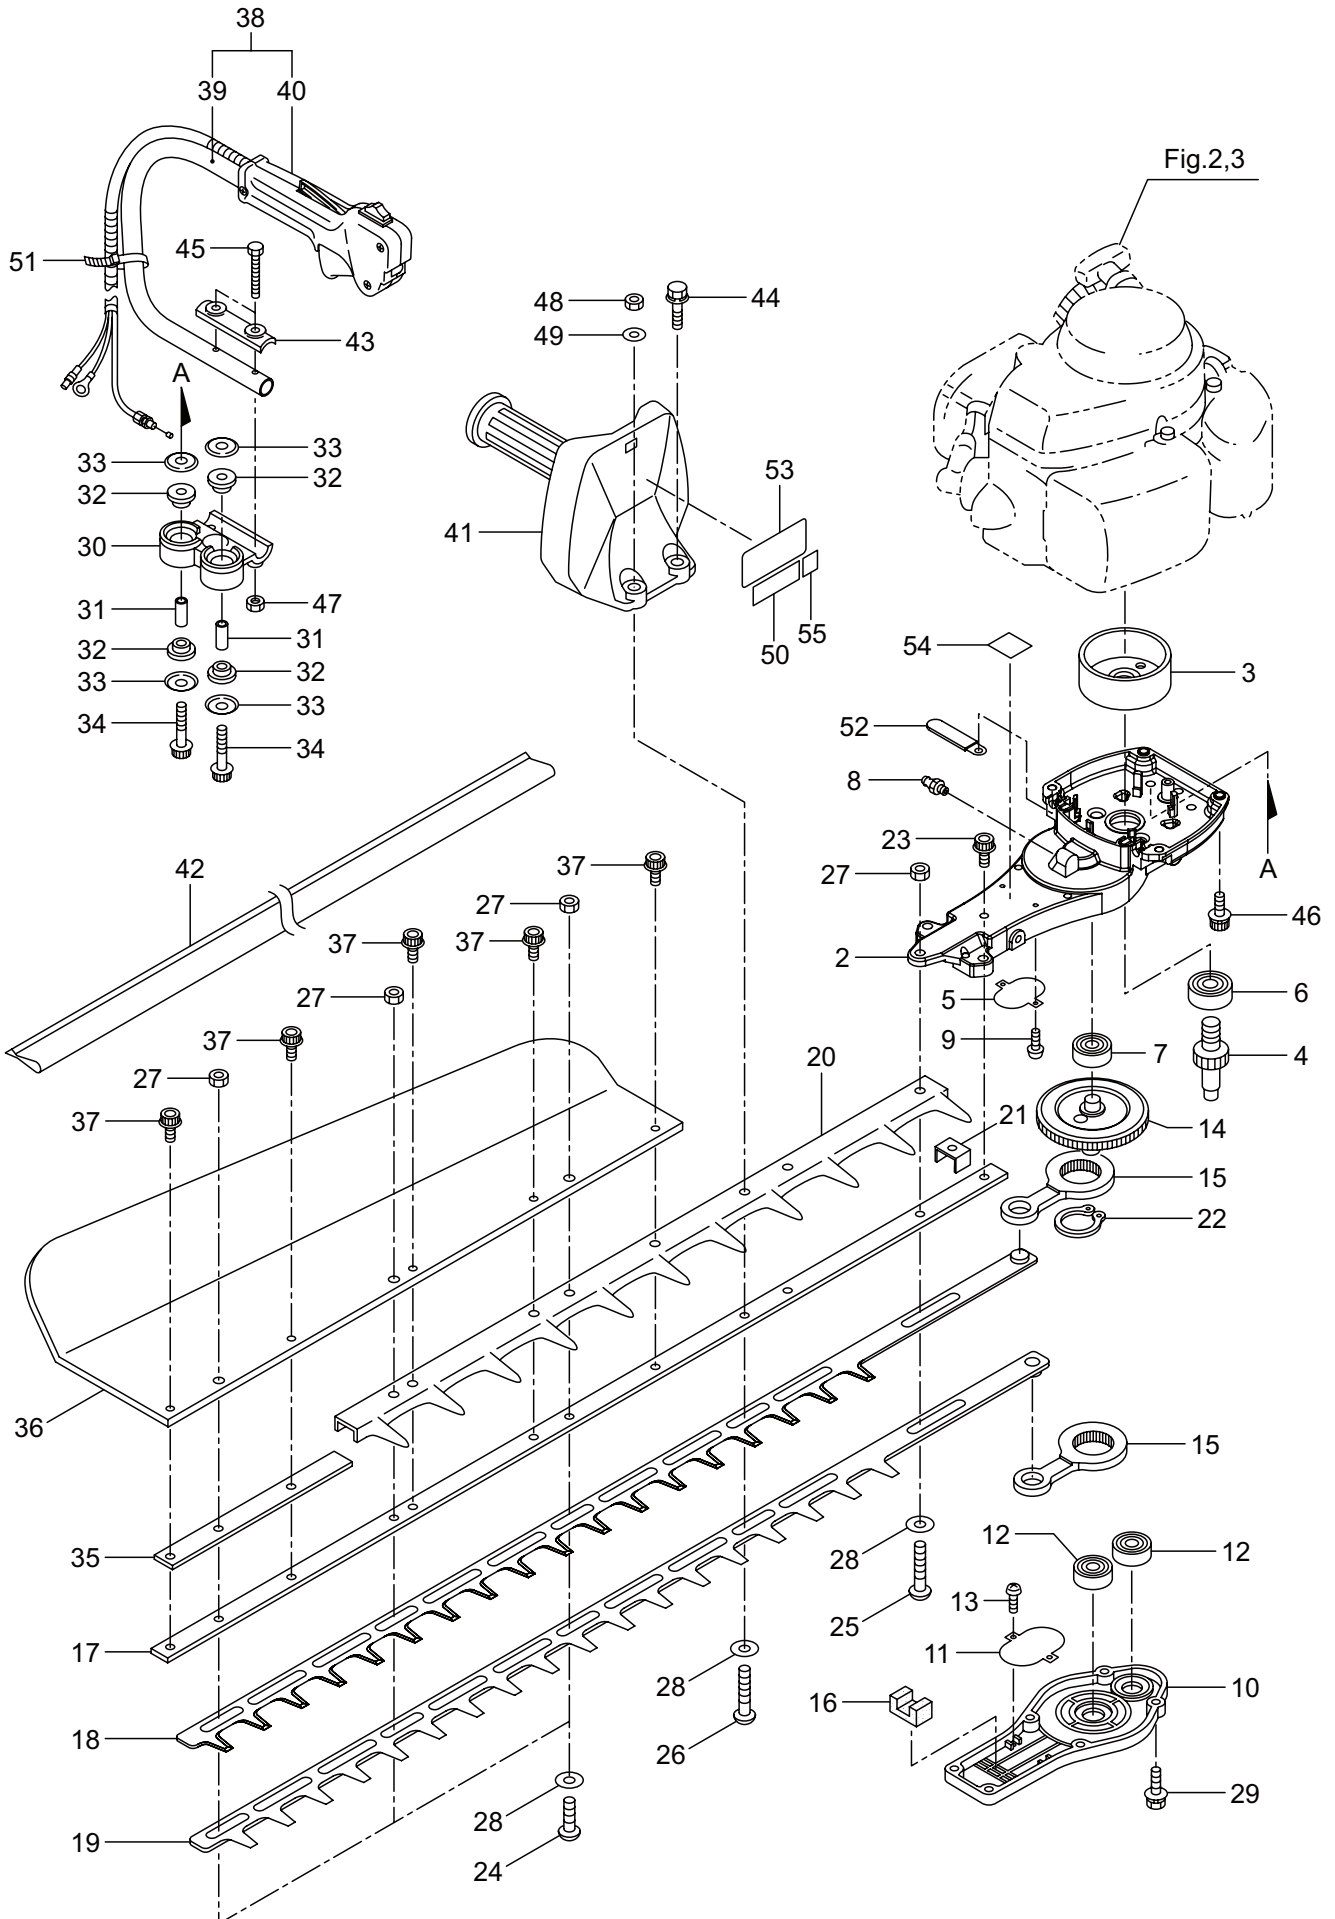


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-46	271908	Screw	4	
1-47	991938	Nut	2	M5
1-48	991941	U-Nut	1	M6
1-49	991964	Washer	1	
1-50	270566	Label	1	
1-51	274299	Band	2	
1-52	274300	Clamp	1	
1-53	266957	Label	1	
1-54	266960	Label	1	
1-55	287394	Label	1	109dB

2. HT238P ENGINE

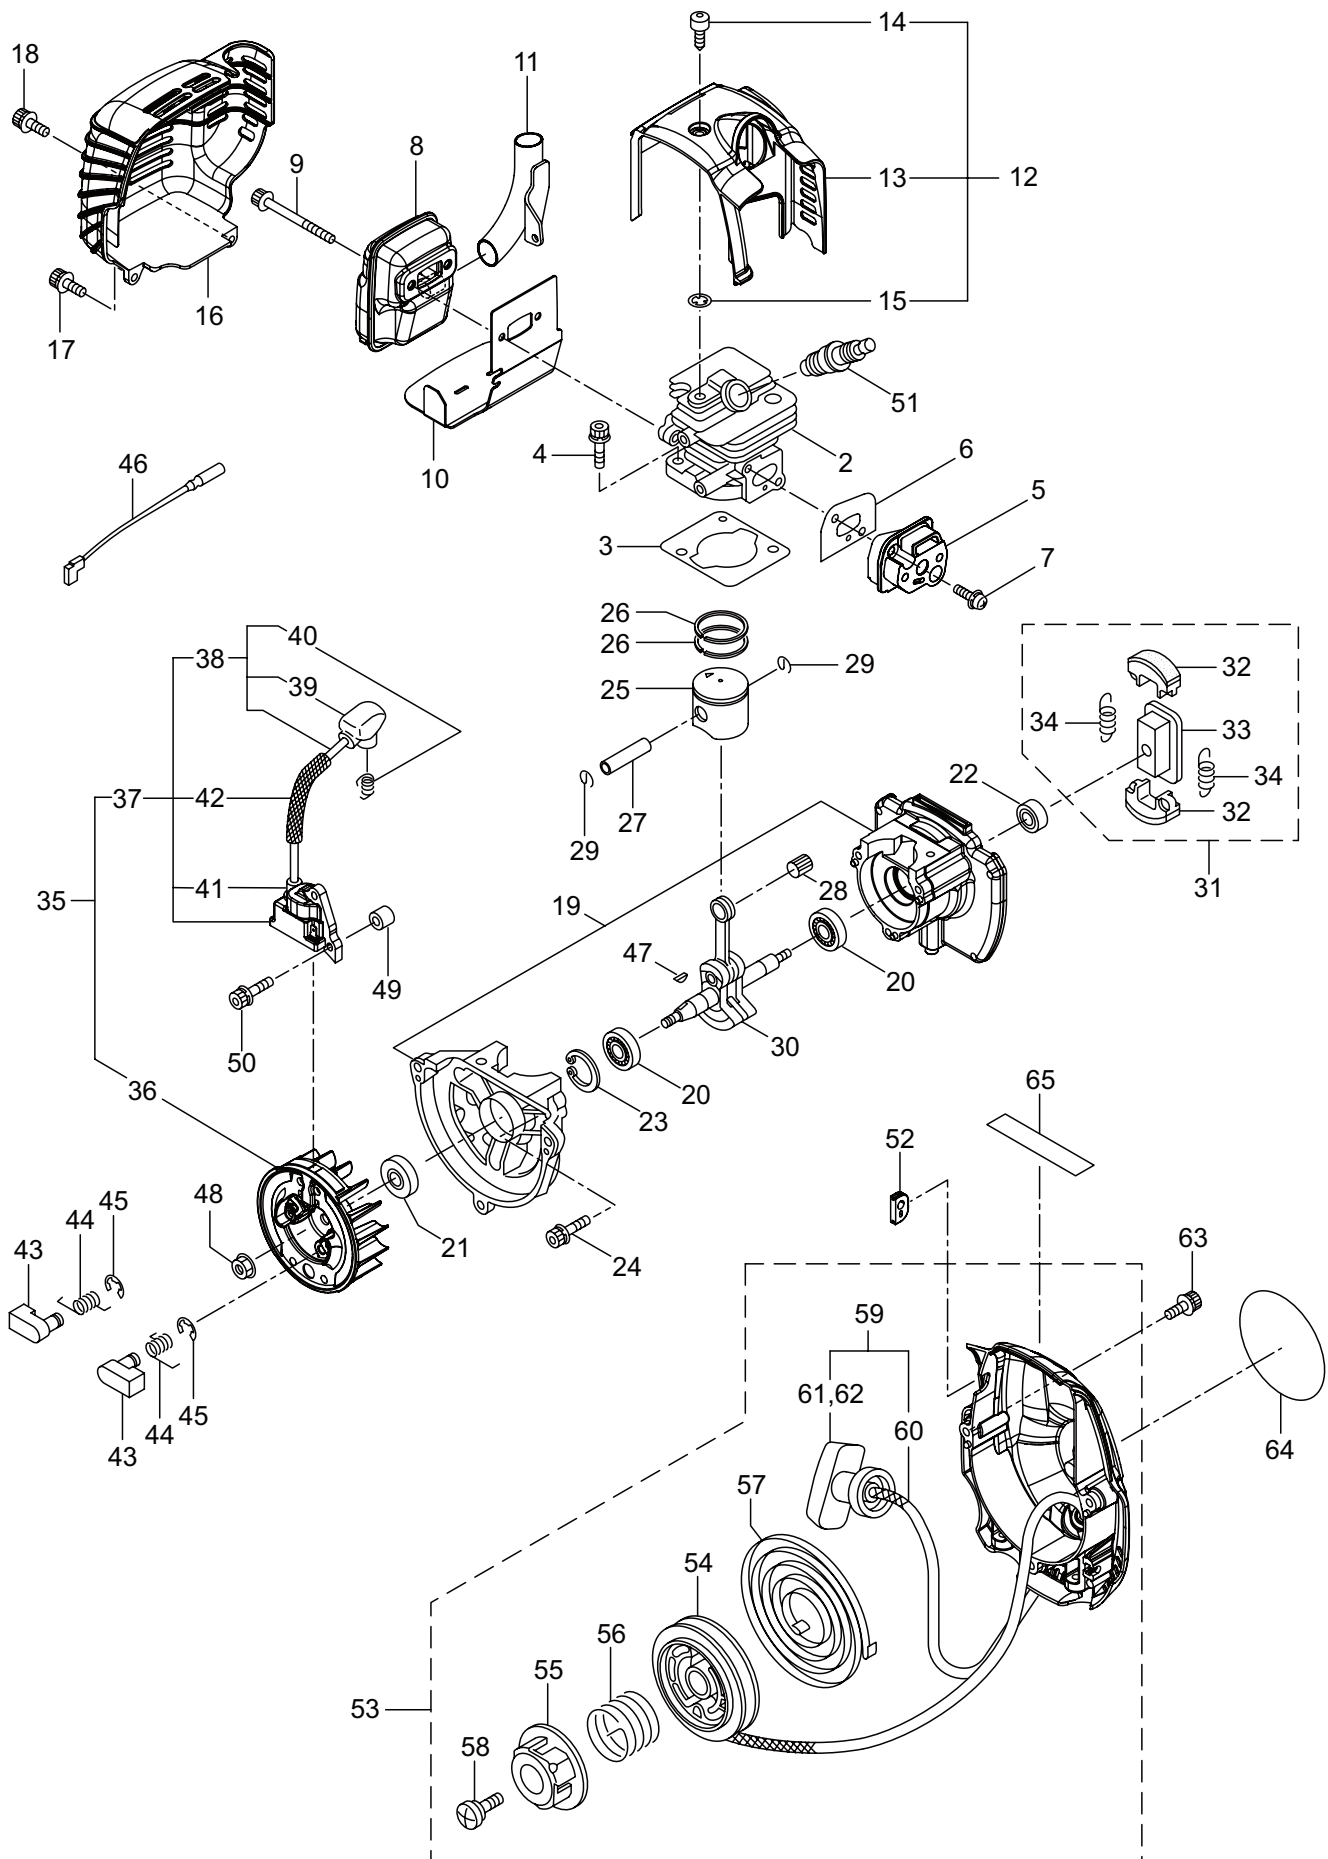


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	875158	Engine	1	HE232/05
2-2	278641	Cylinder	1	
2-3	289643	Gasket	1	
2-4	267290	Cap Screw	2	M5x20
2-5	272744	Insulator	1	New gasket required
2-6	267049	Gasket	1	
2-7	265924	Cap Screw	2	M5x25
2-8	278263	Muffler Comp	1	
2-9	266402	Cap Screw	2	M5x55
2-10	278273	Gasket	1	
2-11	278987	Tail Pipe Comp	1	
2-12	278288	Cylinder Cover Ass'y	1	Incl.13-15
2-13	277793	Cylinder Cover	1	
2-14	286399	Knob	1	M5
2-15	286270	Washer	1	M5
2-16	278272	Muffler Cover Comp	1	
2-17	261607	Cap Screw	1	M5x16
2-18	267191	Cap Screw	1	M5x16
2-19	278208	Crankcase	1	
2-20	261181	Bearing	2	#6000C3
2-21	262712	Oil Seal	1	TC10267
2-22	262713	Oil Seal	1	TC10207
2-23	054676	Snap Ring	1	#26
2-24	261246	Cap Screw	3	M5x25
2-25	272204	Piston	1	
2-26	264891	Piston Ring	2	(2)required
2-27	261036	Piston Pin	1	
2-28	288520	Bearing, Needle	1	
2-29	261576	Clip,Piston	2	
2-30	283155	Shaft Comp	1	
2-31	280404	Clutch Ass'y	1	Incl.32-34
2-32	280568	Clutch Shoe	2	(2)required
2-33	280569	Clutch Boss	1	
2-34	280570	Spring	2	(2)required
2-35	278161	Magneto Ass'y	1	Incl.36-42
2-36	278176	Rotor/Fan	1	
2-37	278293	Ignition Coil Ass'y	1	Incl.38-42
2-38	278367	Spark Plug Wire Ass'y	1	Incl.39,40
2-39	282292	Plug Boot	1	
2-40	261075	Connector	1	
2-41	261072	Cap	1	
2-42	280080	Insulator	1	
2-43	280936	Ratchet	2	
2-44	280553	Spring	2	
2-45	020299	E-Ring	2	#4

2. HT238P
ENGINE

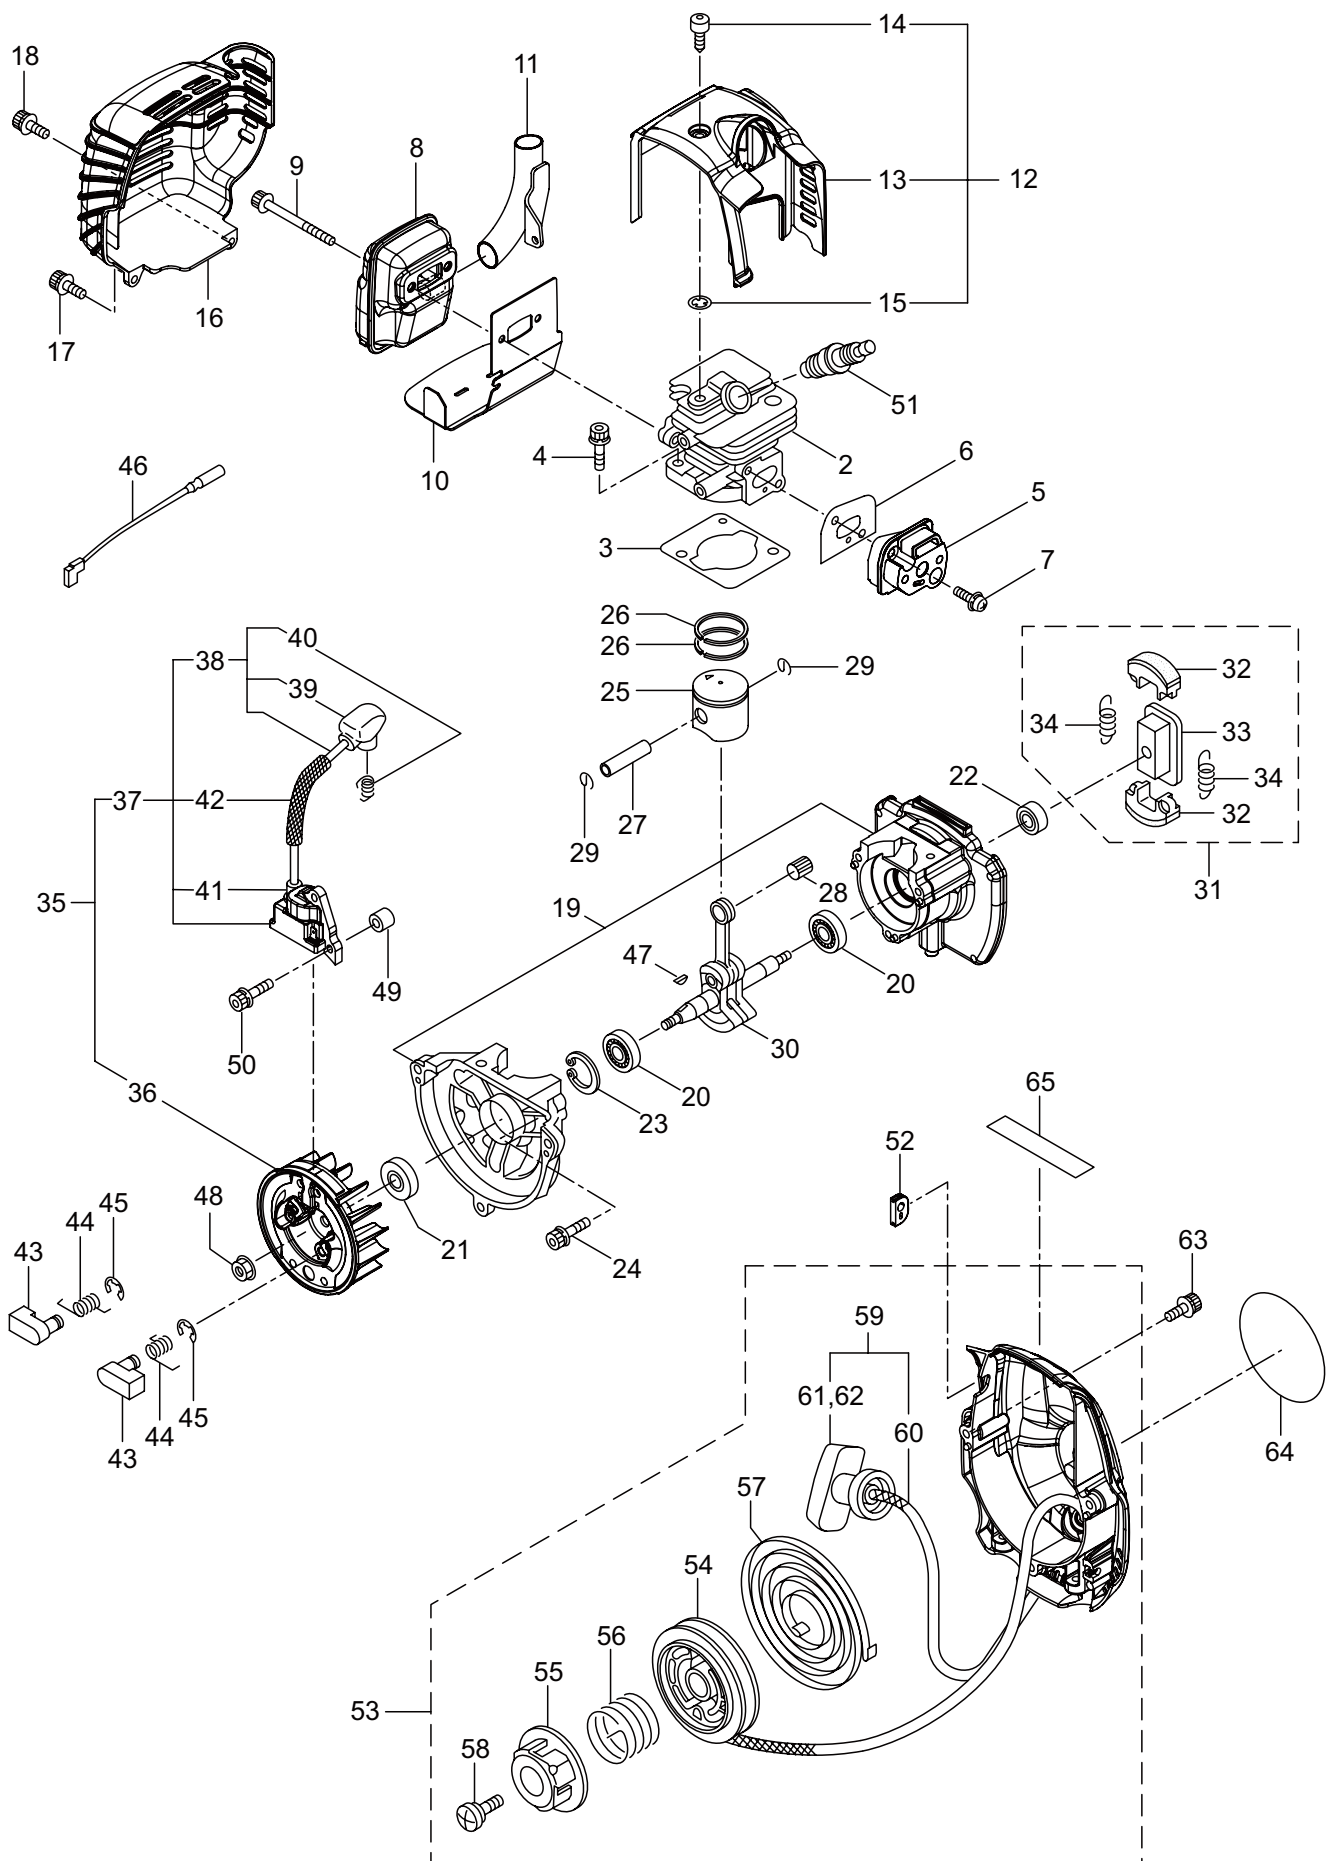






Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-46	267492	Lead	1	130L
2-47	261076	Woodruff Key	1	3x10
2-48	261077	Nut,Rotor	1	M6
2-49	280381	Spacer	2	
2-50	278831	Cap Screw	2	M4x20
2-51	288264	Spark Plug	1	BPMR8Y
2-52	278294	Grommet	1	
2-53	278177	Starter Ass'y	1	Incl.54-62
2-54	286363	Reel	1	
2-55	286364	Cam Plate	1	
2-56	283290	Spring	1	
2-57	280931	Spiral Spring	1	
2-58	267213	Screw	1	
2-59	283291	Rope Ass'y	1	Incl.60-62
2-60	283292	Starter Rope	1	
2-61	261725	Starter Grip	1	
2-62	283293	Rope Stopper	1	
2-63	267290	Cap Screw	3	M5x20
2-64	278991	Label	1	HT238P
2-65	266959	Label	1	Caution

3. HT238P
 CARBURETOR, FUEL TANK

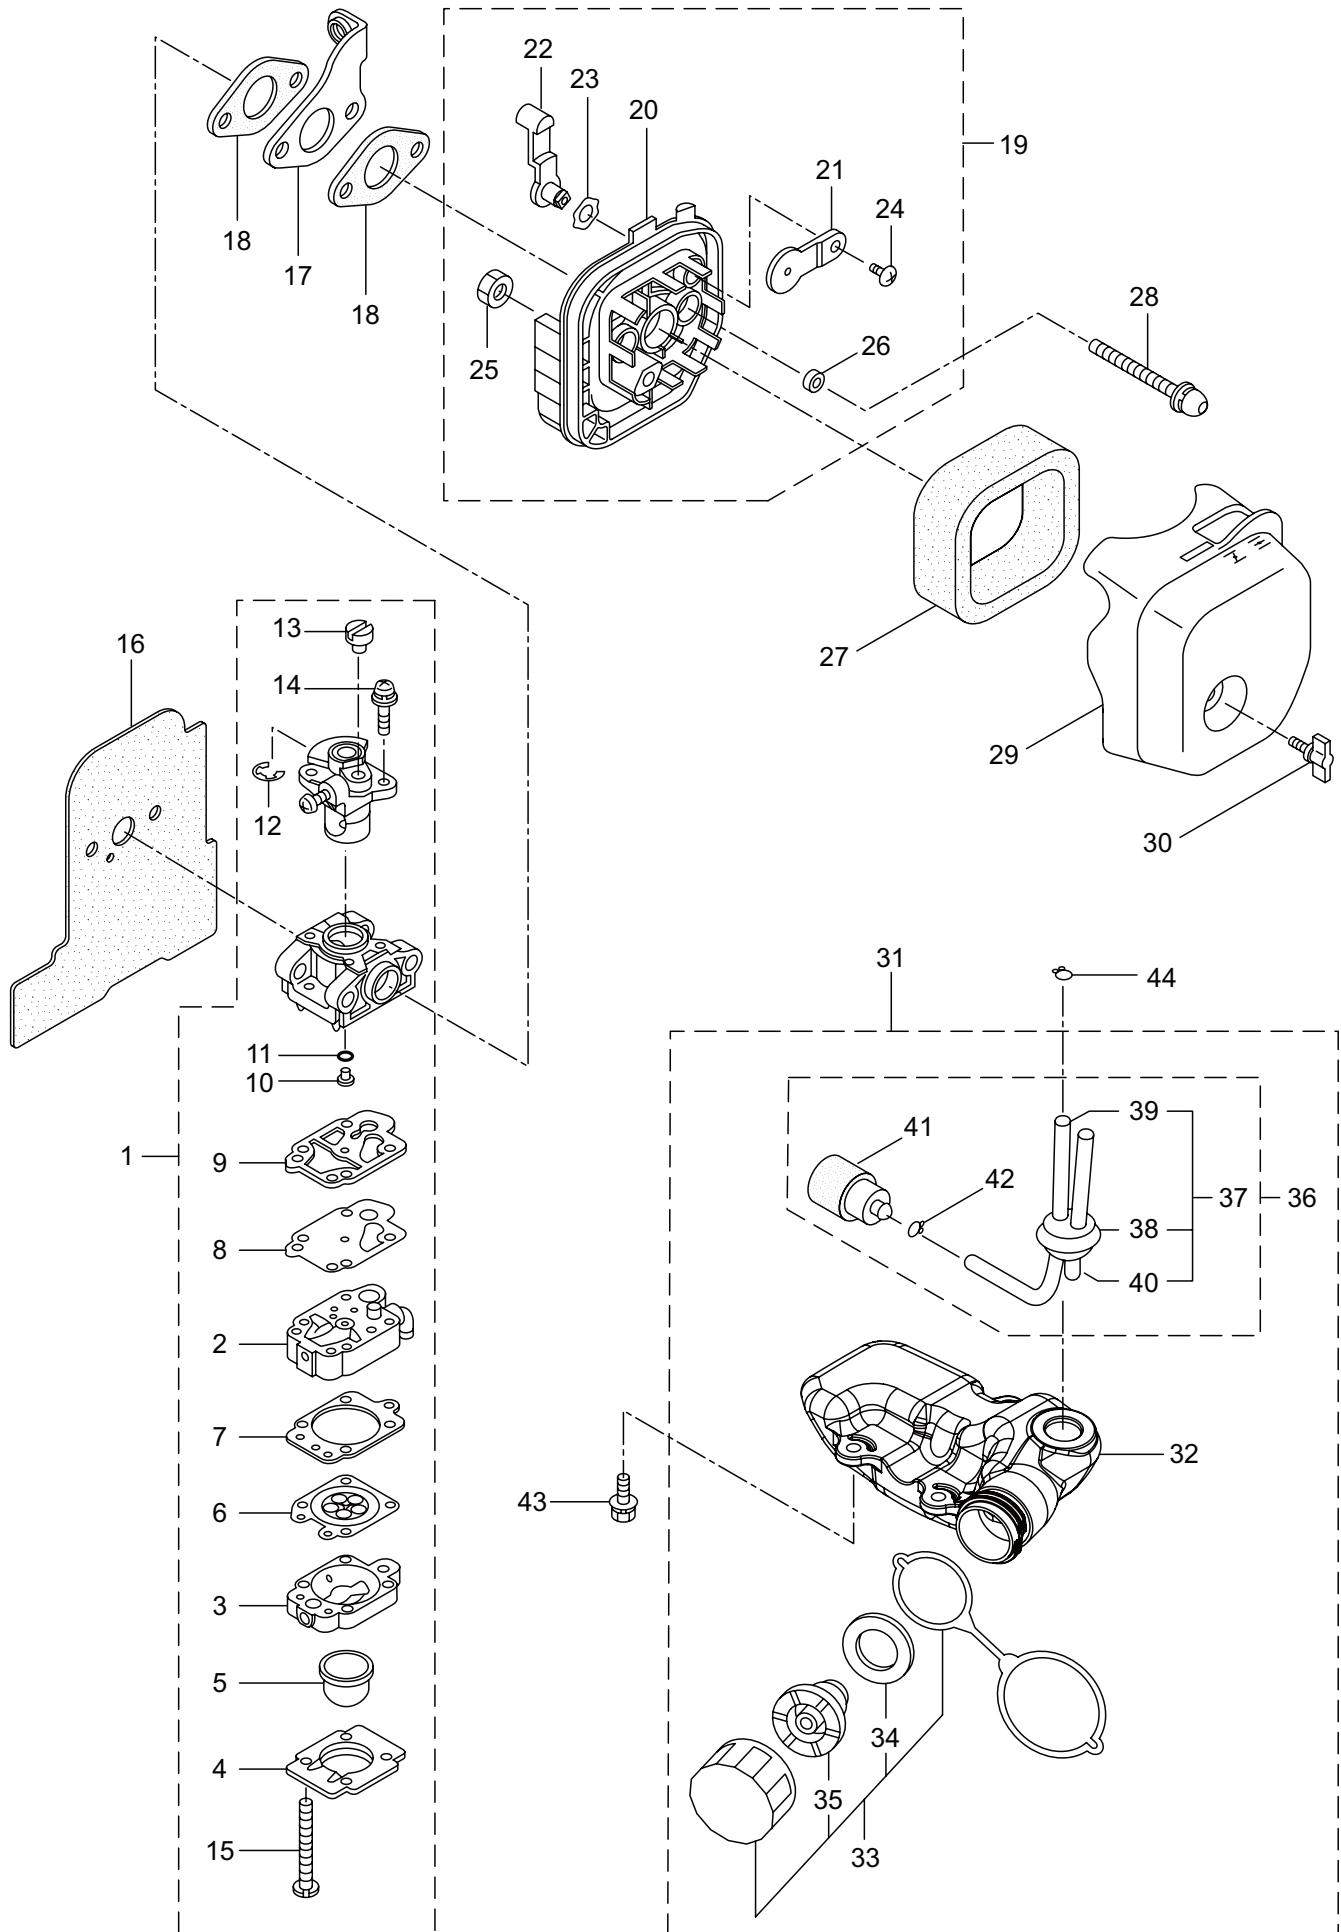

Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	278297	Carburetor Ass'y	1	Incl.2-15
3-2	268499	Pump Body	1	
3-3	262991	Purge Body	1	
3-4	262992	Cover Plate	1	
3-5	261874	Primer Bulb	1	
3-6	283905	Diaphragm, Meterring	1	
3-7	262993	Gasket	1	
3-8	262994	Diaphragm,Fuel Pump	1	
3-9	282576	Gasket	1	
3-10	289396	Main Jet	1	
3-11	261871	O-Ring	1	
3-12	261876	E-Ring	1	
3-13	261658	Swivel	1	
3-14	264682	Screw	2	
3-15	262996	Screw	4	
3-16	278750	Gasket	1	
3-17	283773	Stay	1	
3-18	283771	Gasket	2	
3-19	289048	Case Ass'y	1	Incl.20-26
3-20	269050	Case Body	1	
3-21	289019	Valve	1	
3-22	284803	Lever	1	
3-23	284816	Washer	1	6.4x11x0.15
3-24	269032	Screw	1	
3-25	126993	Nut	1	M5
3-26	269051	Sleeve	2	
3-27	269030	Element	1	
3-28	264016	Cap Screw	2	M5x60
3-29	283772	Cleaner Cover	1	
3-30	281438	Knob	1	
3-31	278209	Fuel Tank Ass'y	1	Incl.32-42
3-32	277791	Fuel Tank	1	
3-33	283438	Tank Cap Ass'y	1	Incl.34,35
3-34	283727	Gasket	1	
3-35	283764	Breather Ass'y	1	
3-36	265752	Fuel Pipe Pick-up Ass'y	1	Incl.37-42
3-37	264031	Fuel Pipe Ass'y	1	Incl.38-40
3-38	261115	Grommet	1	
3-39	261690	Fuel Pipe	1	160L
3-40	263038	Return Pipe	1	3x6x85L
3-41	264653	Filter Ass'y	1	
3-42	261117	Clip	1	
3-43	269690	Cap Screw	3	M5x18
3-44	261117	Clip	1	

4. HT238P
ACCESSORIES

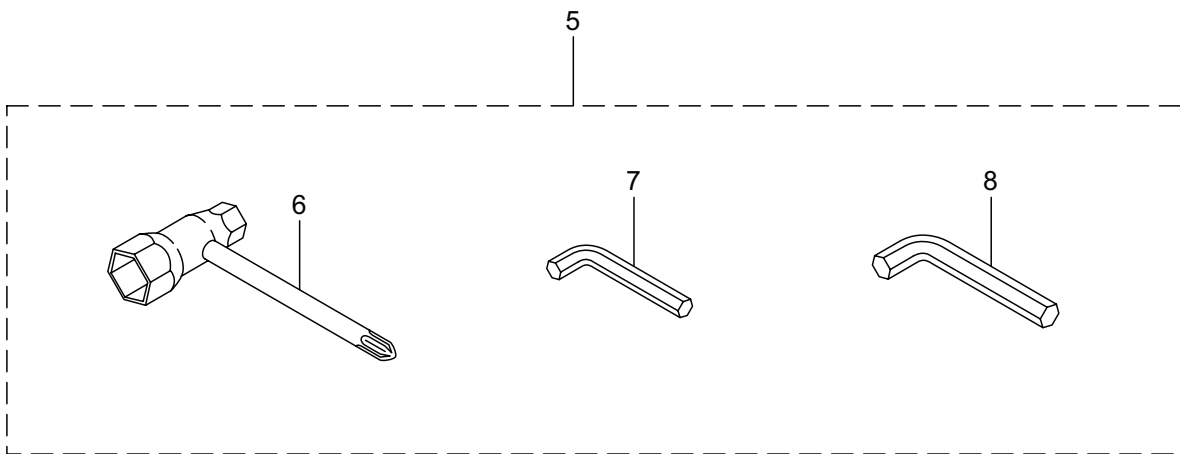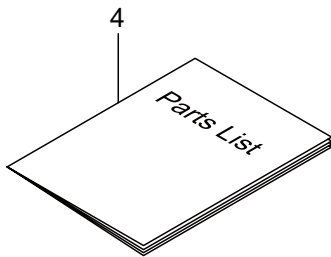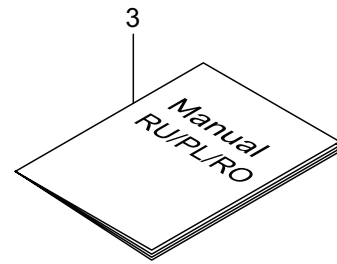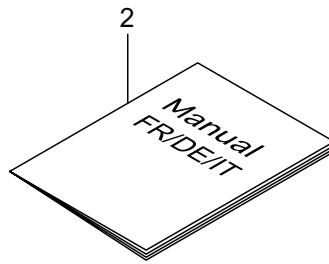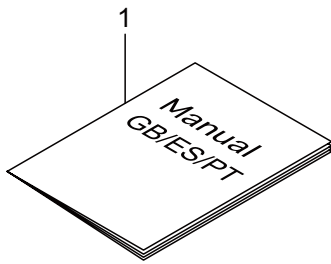

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	278995	Instruction Manual	1	GB/ES/PT HT238P
4-2	278996	Instruction Manual	1	FR/DE/IT HT238P
4-3	278997	Instruction Manual	1	RU/PL/RO HT238P
4-4	524562	Parts List	1	HT238P
4-5	264606	Tool Set	1	Incl.6-8
4-6	264607	Box Spanner	1	10x19x(+)
4-7	219431	Wrench	1	3mm
4-8	219432	Wrench	1	4mm